


UNWINDERS & CORE EATERS

Electric or air driven UNWINDERS are placed next to the press to strip butt rolls without the use of dangerous blades. The top, receiving shaft makes a loosely wound product that can easily be run through a hogger or placed in a baler. Initial unwind speed is 200' per minute. The adjustable collar on the bottom loading shaft allows narrower rolls to be processed. Tapers on the receiving shaft not only make the unwind loose, but also makes



the removal of the paper easy, avoiding the "Chinese finger trap" syndrome and eliminating any need to lubricate the shaft. A 10"-12" overhang is also recommended to allow for easy gripping of the paper. Special adapters can be made for larger i.d. cores. Call us with your widest roll width and we will match you to the correct UNWINDER.

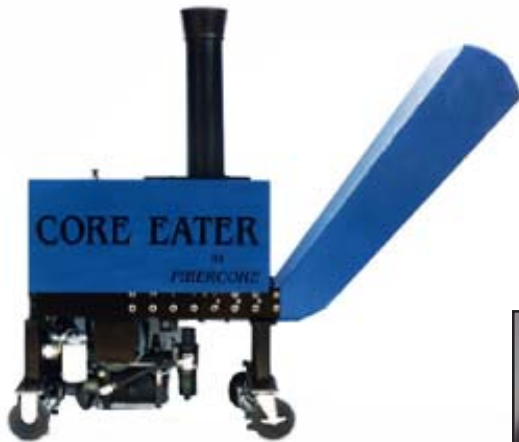

3" I.D. CORE EATER

CORE EATERS are designed to use casual labor by placing next to the press and in the same area as the UNWINDER. 4" long, split pieces are pushed up the delivery chute as the core is processed. Electric or air models available



core pieces

Cores are placed in the top of the 3" model and on the side of the 6" model, after all white waste, plugs and caps have been removed. After the core has been completed, the machine will stop unless another core has been placed on top of it. Feed rate is between 2' & 8' per minute based on style chosen.



6" & 3" CORE EATER

Fibercore Onsite Paper Services
4478 Old Manchester Highway Tullahoma, Tennessee 37388
931-455-8767 sales@fibercoreops.com